


# INON

## INON Grip Base D4 Compatibility Chart

This chart provides complimentary information when installing the Grip Base D4 on compatible housing. Refer to user manual of the Grip Base D4 for detail of installation method. Check your camera/housing combination in the chart to see which 「D Base・SPS」 pattern you need, which screw hole to use (A or B) and if your combination requires a spacer or not.

- Glossary: [Pattern] Combination patterns of Main Plate/Sub Plates.  
 ex) Olympus C-200Z + PT-009 requires **【Pattern 3】** .
- [Screw Hole] Indicates which Screw Hole (A or B on Sub Plate) to use to fasten with a cap bolt.  
 ex) Olympus C-200Z + PT-009 uses Screw Hole **【A】** .
- [Spacer] Indicates if a camera system/housing requires a spacer or not.  
 ex) Olympus C-200Z + PT-009 **【Not necessary】** .
- [MB/LAB] Mount Base(28LD, AD, 28AD, M67) or Lens Adapter Base(M67LAB, LDLAB) compatibility.

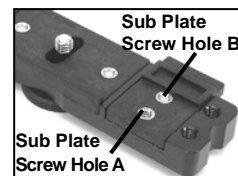


### 「D Base・SPS」 preparation


【Originally the 「D Base・SPS」 has 『Pattern 1』 / 『Screw Hole B』 configuration and not necessary to recombine if your camera system requires exactly same setting】

- ① Unscrew M4 cap screws on Main Plate/Sub Plates by supplied M4 Hex Wrench.
- ② Remove unnecessary Sub Plate(s) (if necessary) and recombine each plate according to your pattern (see below illustration).  
 \* Align each plate relative to “INON logo” mark on the 「D Base・SPS」 .
- ③ Push each plate all the way to directions indicated by small arrows in below images and fasten all plates by tightening M4 Cap Screws/M4 Washers.


#### Pattern 1

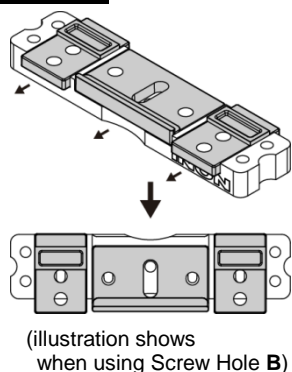


#### Pattern 2

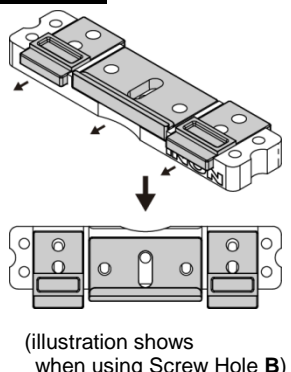


#### Pattern 3

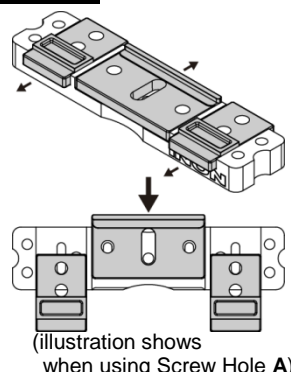


#### Pattern 4

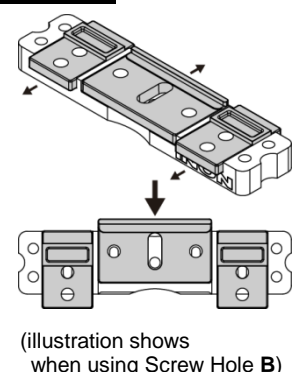


#### Pattern 5

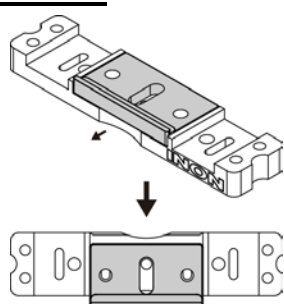


#### Pattern 6

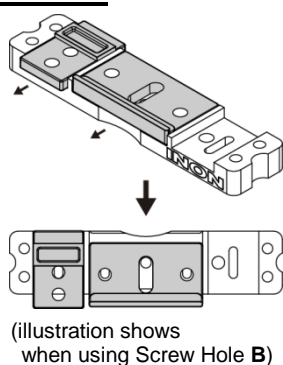

#### Pattern 7

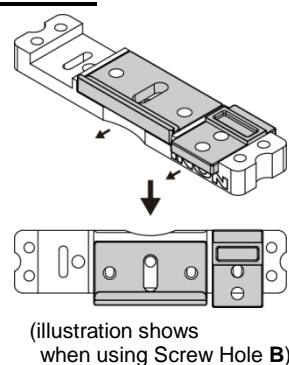


#### Pattern 8

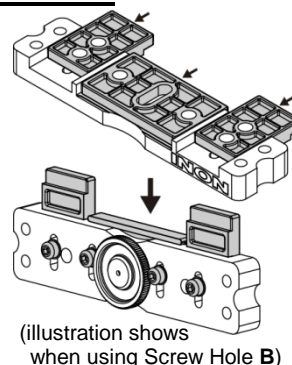

- ④ After adjusting each plates position, tighten the 1/4 Tripod Screw firmly to fasten the 「D Base・SPS」 .
- ⑤ For installation method on your housing, please refer 「Grip Base D4」 user manual.

**\* \* When Tripod Screw Spacer is required \* \***

Make sure to use the Tripod Screw Spacer if your camera system requires it. The spacer is not pre-installed. Your housing may get damaged by the 1/4 Tripod Screw without using the spacer though your camera system requires to use the spacer.

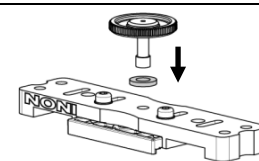

(illustration shows when using Pattern 5 and Screw Hole B)

## [Compact digital camera]

Mfr	Camera	Housing	Pattern	Screw Hole	Spacer	MB/LAB	RMK
Olympus	TG-3, TG-4	PT-056	2	A	No	—	
	TG-830, TG-835	PT-055	2	A	No	—	
	XZ-2	PT-054	3	A	No	—	
	TG-1, TG-2	PT-053	2	A	No	—	
	TG-820	PT-052	5	—	No	—	
	TG-610, TG-8610	PT-051	5	—	No	—	
	XZ-1	PT-050	5	—	No	—	
	μ TOUGH-6020, 8010	PT-048	6	B	No	—	
	μ TOUGH-6000	PT-047	6	B	No	28AD	
	FE-3010	PT-046	5	—	No	AD	
	μ TOUGH-8000	PT-045	6	B	No	28AD	
	FE-360	PT-044	5	—	No	AD	
	μ 1030SW	PT-043	1	B	No	28AD	
	μ 1020	PT-042	4	B	No	M67	
	μ 790SW, μ 850SW	PT-041	1	B	No	AD	
	μ 780, μ 830	PT-039	1	B	No	M67	
	SP-550UZ, SP-560UZ	PT-037	1	A	No	—	
	μ 760	PT-036	1	B	No	AD	
	μ 770SW, μ 795SW	PT-035	1	B	No	AD	
	μ 750	PT-034	1	B	No	M67	
	μ 720SW, μ 725SW	PT-033	1	B	No	AD	
	μ 710	PT-032	1	B	No	AD	
	SP-700	PT-031	1	B	No	AD	
	SP-350	PT-030	1	B	No	AD	
	μ 600	PT-029	1	B	No	AD	
	C-5060WZ, C-7070WZ	PT-027	1	B	No	28AD	
	μ-40	PT-026	1	B	No	AD	
	X-3	PT-024	1	B	No	AD	
	C-8080WZ	PT-023	1	B	No	—	
	C-760UZ, C-770UZ	PT-022	1	A	No	—	
	C-5060WZ	PT-020	1	A	No	28AD	
	C-740UZ, C-745UZ, C-750UZ, C-755UZ	PT-018	1	B	No	—	
	μ-10, μ-15, μ-20, μ-25, μ-30	PT-016	1	B	No	AD	
	C-5050Z	PT-015	1	A	No	—	
	X-1, X-2	PT-014	1	B	No	AD/M67	
	C-40Z	PT-012	1	B	No	AD/M67	
	C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z, C-3100Z, C-4040Z, C-4100Z	PT-010	1	A	No	—	
	C-200Z, C-300Z	PT-009	3	A	No	AD	
	C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z, C-2020Z, C-3000Z, C-3030Z	PT-007	1	A	No	—	
	C-2020Z, C-3000Z, C-3030Z	PT-005	1	A	No	—	

Fujifilm	FUJIFILM XQ1, XQ2	WP-XQ1	5	—	No	28LD	
	Finepix F300EXR, F550EXR, F600EXR	WP-FXF500	5	—	No	M67LAB	
	Finepix F80EXR	WP-FXF80	5	—	No	M67LAB	
	Finepix Z100fd, Z200fd, Z250fd	WP-FXZ100	5	—	No	—	
	Finepix F200EXR	WP-FXF200	5	—	No	M67LAB	
	Finepix F100fd	WP-FXF100	5	—	No	M67LAB	
	Finepix F50fd	WP-FXF50	5	—	No	AD	
	Finepix F40fd	WP-FXF40	5	—	No	AD	
	Finepix F30, F31fd	WP-FXF30	5	—	No	AD	
	Finepix F10, F11	WP-FXF10	1	B	No	AD	
	Finepix F710, F810	WP-FX701	5	—	No	AD	

Sony	DSC-RX100M5, DSC-RX100M4, DSC-RX100M3, DSC-RX100M2, DSC-RX100	MPK-URX100A	3	B	No	—	*2
	DSC-T77, T700, T90	MPK-THGB	7	A	No	AD	
	DSC-T77, T700	MPK-THG	7	A	No	AD	
	DSC-WX200, WX100, WX50	MPK-WH	1	B	No	M67LAB	
	DSC-W170, W300	MPK-WD	1	B	No	M67	
	DSC-W1, W5, W7	MPK-WA	6	B	No	AD	
	DSC-N1, N2	MPK-NA	1	B	No	AD	
	DSC-P100, P150	MPK-PHB	1	B	No	AD	

Nikon	E7900, E5900	WP-CP4	1	B	No	AD	
	E4200, E5200	WP-CP2	1	B	No	AD	
	E2200, E3200, E4100	WP-CP1	1	B	No	AD	

## [Interchangeable lens digital camera]

Mfr	Camera	Housing	Pattern	Screw Hole	Spacer	MB/LAB	RMK
Olympus	OM-D E-M1 Mark II	PT-EP14	1	A	No	—	*2
	OM-D E-M5 Mark II	PT-EP13	1	A	No	—	*2
	PEN E-PL7	PT-EP12	3	A	No	—	
	OM-D E-M1	PT-EP11	3	A	No	—	*2
	PEN E-PL5	PT-EP10	3	A	No	—	*2
	OM-D E-M5	PT-EP08	3	A	No	—	*2
	PEN E-PM1	PT-EP06L	3	A	No	—	*2
	PEN E-PL3	PT-EP05L	3	A	No	—	*2
	PEN E-PL2	PT-EP03	3	A	No	—	*2
	PEN E-PL1	PT-EP01	3	A	No	—	*2

Panasonic	LUMIX GF2	X-2 for GF2	1	B	No	—	*2
	LUMIX GF1	X-2 for GF1	1	B	No	—	*2

Mfr	Camera	Housing	Pattern	Screw Hole	Spacer	MB/LAB	RMK
Panasonic	LUMIX FT5	MCFT5	2	B	No	28LD	
	LUMIX FT3, FT4	MCFT3	2	B	No	28LD	
	LUMIX FT2	MCFT2	2	B	No	28AD	
	LUMIX FT1	MCFT1	2	B	No	28AD	
	LUMIX TZ40	MCTZ40	2	B	No	M67LAB	
	LUMIX TZ35	MCTZ35	2	B	No	M67LAB	
	LUMIX TZ30	MCTZ30	2	B	No	M67LAB	
	LUMIX TZ20	MCTZ20	2	B	No	M67LAB	
	LUMIX TZ10	MCTZ10	2	B	No	M67LAB	
	LUMIX TZ7	MCTZ7	2	B	No	M67LAB	
	LUMIX TZ5	MCTZ5	2	B	No	M67LAB	
	LUMIX TZ3	MCTZ3	2	B	No	—	
	LUMIX ZX3	MCZX3	2	B	No	M67LAB	
	LUMIX ZX1	MCZX1	2	B	No	M67LAB	
	LUMIX FX40	MCFX40	2	B	No	28AD	
	LUMIX FX35, FX37	MCFX35	2	B	No	28AD	
	LUMIX FX30, FX37	MCFX30	2	B	No	28AD	
	LUMIX FX01, FX07	MCFX07	2	B	No	28AD	
	LUMIX FX01, FX07	MCFX01	2	B	No	28AD	
	LUMIX FS3, FS5	MCF5	2	B	No	28AD	
	LUMIX FS1, FS2	MCFX07	2	B	No	28AD	

Canon	PowerShot G7 X Mark II	WP-DC55	1	B	No	LDLAB	
	PowerShot G7 X	WP-DC54	1	B	No	LDLAB	
	PowerShot G1 X Mark II	WP-DC53	1	A	Yes	—	
	PowerShot G16	WP-DC52	1	A	No	LDLAB	
	PowerShot S120	WP-DC51	1	B	No	28LD	
	PowerShot SX280 HS	WP-DC49	1	B	No	LDLAB	
	PowerShot G15	WP-DC48	1	A	No	M67LAB	
	PowerShot S110	WP-DC47	1	B	No	28LD	
	PowerShot D20	WP-DC45	2	B	No	28LD	
	PowerShot G1 X	WP-DC44	1	A	No	LDLAB	
	PowerShot SX260 HS	WP-DC46	1	B	No	LDLAB	
	PowerShot S100	WP-DC43	1	B	No	28LD	
	PowerShot S95	WP-DC38	1	B	No	28LD	
	PowerShot S90	WP-DC35	1	B	No	28AD	
	PowerShot G11, G12	WP-DC34	1	A	No	—	
	PowerShot G10	WP-DC28	1	A	No	—	
	PowerShot G9	WP-DC21	1	A	No	—	
	PowerShot A650IS	WP-DC18	1	A	No	—	
	PowerShot A570IS	WP-DC12	1	B	No	AD	
	PowerShot G7	WP-DC11	1	A	No	—	
	PowerShot A540	WP-DC2	1	B	No	AD	
	PowerShot S80	WP-DC1	1	B	No	28AD	
	PowerShot A95	WP-DC50	1	B	No	AD	*1
	PowerShot S60, S70	WP-DC40	1	B	No	28AD	*1
	PowerShot A75, A85	WP-DC30	1	B	No	AD	*1
	PowerShot S1 IS	WP-DC20	1	B	No	M67	*1
	PowerShot A80	WP-DC900	1	B	No	AD	*1
	PowerShot A60, A70	WP-DC700	1	B	No	AD	*1
	PowerShot S30, S40, S45, S50	WP-DC300	1	A	No	AD/M67	
	PowerShot A10, A20, A30, A40	WP-DC200s	1	A	No	AD/M67	
	PowerShot A10, A20	WP-DC200	1	A	No	AD/M67	
	IXY 200F	WP-DC36	1	B	No	28AD	
	IXY D220IS	WP-DC33	1	B	No	28AD	
	IXY D510IS	WP-DC32	5	—	Yes	28AD	
	IXY D210IS	WP-DC31	1	B	No	AD	
	IXY D110IS	WP-DC29	1	B	No	AD	
	IXY D3000IS	WP-DC27	1	B	No	AD	*1
	IXY D920IS	WP-DC26	1	B	No	28AD	
	IXY D95IS	WP-DC24	1	B	No	AD	
	IXY D25IS	WP-DC23	1	B	No	AD	
	IXY D20IS	WP-DC22	1	B	No	AD	
	IXY D2000IS	WP-DC19	1	B	No	AD	*1
	IXY D910IS	WP-DC17	1	B	No	28AD	
	IXY D810IS	WP-DC15	1	B	No	AD	*1
	IXY D90	WP-DC14	1	B	No	AD	
	IXY D10	WP-DC13	1	B	No	AD	
	IXY D900IS	WP-DC9	1	B	No	28AD	
	IXY D1000	WP-DC7	1	B	No	AD	*1
	IXY D800IS	WP-DC5	1	B	No	AD	*1
	IXY D70	WP-DC4	1	B	No	AD	
IXY D80	WP-DC3	1	B	No	AD		
IXY D700	WP-DC80	1	B	No	AD	*1	
IXY D600	WP-DC70	1	B	No	AD	*1	
IXY D400, D450, D500	WP-DC800	1	B	No	AD	*1	
IXY D300a	WP-DC500	1	B	No	AD/M67	*1	
IXY D300	WP-DC100	1	B	No	AD/M67	*1	

\*1 Do not push Sub Plate too hard against to housing wall.

\*2 The [D Holder] of the [Grip Base D4] is for left side use only. When attaching on the right hand side of the housing, the D Holder part may be touched on the back of your right hand.

INON confirms product compatibility based on a camera/housing available in Japan.