


# INON

## INON Grip Base D4 Compatibility Chart

This chart provides complimentary information when installing the Grip Base D4 on compatible housing. Refer to user manual of the Grip Base D4 for detail of installation method. Check your camera/housing combination in the chart to see which 「D Base・SPS」 pattern you need, which screw hole to use (A or B) and if your combination requires a spacer or not.

- Glossary: [Pattern] Combination patterns of Main Plate/Sub Plates.  
 ex) Olympus C-200Z + PT-009 requires **【Pattern 3】** .
- [Screw Hole] Indicates which Screw Hole (A or B on Sub Plate) to use to fasten with a cap bolt.  
 ex) Olympus C-200Z + PT-009 uses Screw Hole **【A】** .
- [Spacer] Indicates if a camera system/housing requires a spacer or not.  
 ex) Olympus C-200Z + PT-009 **【Not necessary】** .
- [MB/LAB] Mount Base(28LD, AD, 28AD, M67) or Lens Adapter Base(M67LAB, LDLAB) compatibility.

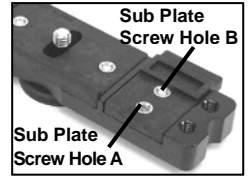


### 「D Base・SPS」 preparation


【Originally the 「D Base・SPS」 has 『Pattern 1』 / 『Screw Hole B』 configuration and not necessary to recombine if your camera system requires exactly same setting】

- ① Unscrew M4 cap screws on Main Plate/Sub Plates by supplied M4 Hex Wrench.
- ② Remove unnecessary Sub Plate(s) (if necessary) and recombine each plate according to your pattern (see below illustration).  
 \* Align each plate relative to “INON logo” mark on the 「D Base・SPS」 .
- ③ Push each plate all the way to directions indicated by small arrows in below images and fasten all plates by tightening M4 Cap Screws/M4 Washers.


#### Pattern 1

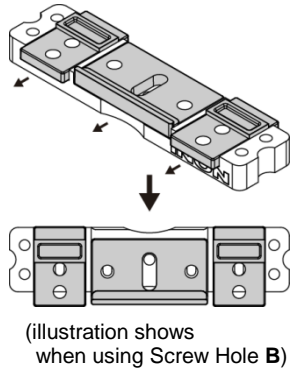


#### Pattern 2

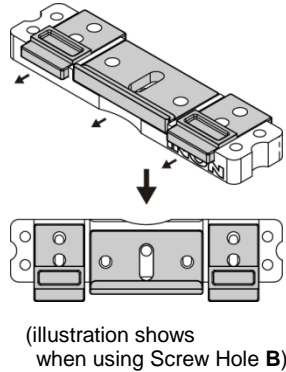


#### Pattern 3

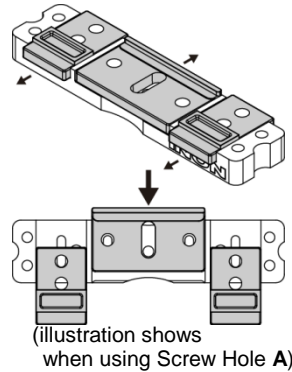


#### Pattern 4

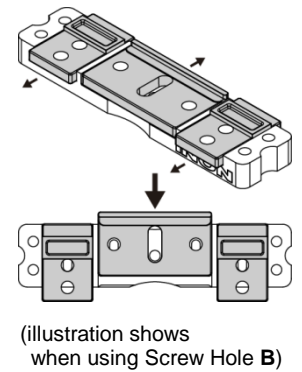


#### Pattern 5

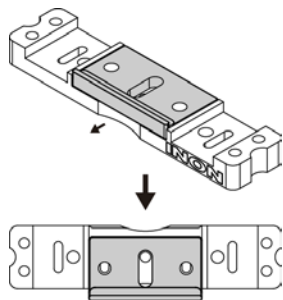


#### Pattern 6

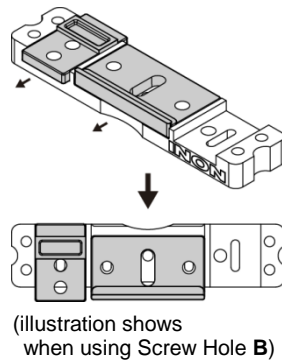

#### Pattern 7

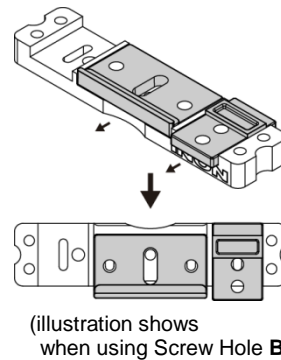


#### Pattern 8

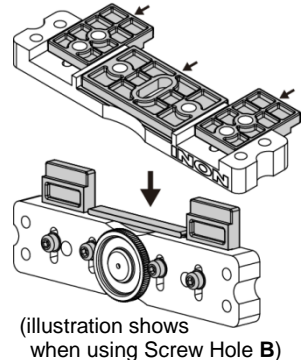

- ④ After adjusting each plates position, tighten the 1/4 Tripod Screw firmly to fasten the 「D Base・SPS」 .
- ⑤ For installation method on your housing, please refer 「Grip Base D4」 user manual.

**\* \* When Tripod Screw Spacer is required \* \***

Make sure to use the Tripod Screw Spacer if your camera system requires it. The spacer is not pre-installed. Your housing may get damaged by the 1/4 Tripod Screw without using the spacer though your camera system requires to use the spacer.

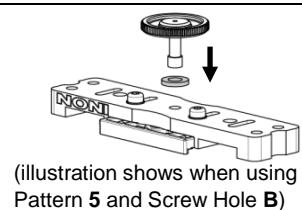

**[Compact digital camera]**

| Mfr     | Camera   | Housing | Pattern | Screw Hole | Spacer | MB/LAB | RMK |
|---------|--|---------|---------|------------|--------|--------|-----|
| Olympus | TG-3, TG-4   | PT-056  | 2       | A          | No     | —      |     |
|         | TG-830, TG-835   | PT-055  | 2       | A          | No     | —      |     |
|         | XZ-2   | PT-054  | 3       | A          | No     | —      |     |
|         | TG-1, TG-2   | PT-053  | 2       | A          | No     | —      |     |
|         | TG-820   | PT-052  | 5       | —          | No     | —      |     |
|         | TG-610, TG-8610  | PT-051  | 5       | —          | No     | —      |     |
|         | XZ-1   | PT-050  | 5       | —          | No     | —      |     |
|         | μ TOUGH-6020, 8010   | PT-048  | 6       | B          | No     | —      |     |
|         | μ TOUGH-6000   | PT-047  | 6       | B          | No     | 28AD   |     |
|         | FE-3010  | PT-046  | 5       | —          | No     | AD     |     |
|         | μ TOUGH-8000   | PT-045  | 6       | B          | No     | 28AD   |     |
|         | FE-360   | PT-044  | 5       | —          | No     | AD     |     |
|         | μ 1030SW   | PT-043  | 1       | B          | No     | 28AD   |     |
|         | μ 1020   | PT-042  | 4       | B          | No     | M67    |     |
|         | μ 790SW, μ 850SW   | PT-041  | 1       | B          | No     | AD     |     |
|         | μ 780, μ 830   | PT-039  | 1       | B          | No     | M67    |     |
|         | SP-550UZ, SP-560UZ   | PT-037  | 1       | A          | No     | —      |     |
|         | μ 760  | PT-036  | 1       | B          | No     | AD     |     |
|         | μ 770SW, μ 795SW   | PT-035  | 1       | B          | No     | AD     |     |
|         | μ 750  | PT-034  | 1       | B          | No     | M67    |     |
|         | μ 720SW, μ 725SW   | PT-033  | 1       | B          | No     | AD     |     |
|         | μ 710  | PT-032  | 1       | B          | No     | AD     |     |
|         | SP-700   | PT-031  | 1       | B          | No     | AD     |     |
|         | SP-350   | PT-030  | 1       | B          | No     | AD     |     |
|         | μ 600  | PT-029  | 1       | B          | No     | AD     |     |
|         | C-5060WZ, C-7070WZ   | PT-027  | 1       | B          | No     | 28AD   |     |
|         | μ -40  | PT-026  | 1       | B          | No     | AD     |     |
|         | X-3  | PT-024  | 1       | B          | No     | AD     |     |
|         | C-8080WZ   | PT-023  | 1       | B          | No     | —      |     |
|         | C-760UZ, C-770UZ   | PT-022  | 1       | A          | No     | —      |     |
|         | C-5060WZ   | PT-020  | 1       | A          | No     | 28AD   |     |
|         | C-740UZ, C-745UZ, C-750UZ, C-755UZ                                     | PT-018  | 1       | B          | No     | —      |     |
|         | μ -10, μ -15, μ -20, μ -25, μ -30                                      | PT-016  | 1       | B          | No     | AD     |     |
|         | C-5050Z  | PT-015  | 1       | A          | No     | —      |     |
|         | X-1, X-2   | PT-014  | 1       | B          | No     | AD/M67 |     |
|         | C-40Z  | PT-012  | 1       | B          | No     | AD/M67 |     |
|         | C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z, C-3100Z, C-4040Z, C-4100Z | PT-010  | 1       | A          | No     | —      |     |
|         | C-200Z, C-300Z   | PT-009  | 3       | A          | No     | AD     |     |
|         | C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z, C-2020Z, C-3000Z, C-3030Z | PT-007  | 1       | A          | No     | —      |     |
|         | C-2020Z, C-3000Z, C-3030Z  | PT-005  | 1       | A          | No     | —      |     |

|          |                                   |           |   |   |    |        |  |
|----------|-----------------------------------|-----------|---|---|----|--------|--|
| Fujifilm | FUJIFILM XQ1, XQ2                 | WP-XQ1    | 5 | — | No | 28LD   |  |
|          | Finepix F300EXR, F550EXR, F600EXR | WP-FXF500 | 5 | — | No | M67LAB |  |
|          | Finepix F80EXR                    | WP-FXF80  | 5 | — | No | M67LAB |  |
|          | Finepix Z100fd, Z200fd, Z250fd    | WP-FXZ100 | 5 | — | No | —      |  |
|          | Finepix F200EXR                   | WP-FXF200 | 5 | — | No | M67LAB |  |
|          | Finepix F100fd                    | WP-FXF100 | 5 | — | No | M67LAB |  |
|          | Finepix F50fd                     | WP-FXF50  | 5 | — | No | AD     |  |
|          | Finepix F40fd                     | WP-FXF40  | 5 | — | No | AD     |  |
|          | Finepix F30, F31fd                | WP-FXF30  | 5 | — | No | AD     |  |
|          | Finepix F10, F11                  | WP-FXF10  | 1 | B | No | AD     |  |
|          | Finepix F710, F810                | WP-FX701  | 5 | — | No | AD     |  |

|      |   |             |   |   |    |        |    |
|------|---|-------------|---|---|----|--------|----|
| Sony | DSC-RX100M5, DSC-RX100M4, DSC-RX100M3, DSC-RX100M2, DSC-RX100 | MPK-URX100A | 3 | A | No | —      | *2 |
|      | DSC-T77, T700, T90  | MPK-THGB    | 7 | A | No | AD     |    |
|      | DSC-T77, T700   | MPK-THG     | 7 | A | No | AD     |    |
|      | DSC-WX200, WX100, WX50  | MPK-WH      | 1 | B | No | M67LAB |    |
|      | DSC-W170, W300  | MPK-WD      | 1 | B | No | M67    |    |
|      | DSC-W1, W5, W7  | MPK-WA      | 6 | B | No | AD     |    |
|      | DSC-N1, N2  | MPK-NA      | 1 | B | No | AD     |    |
|      | DSC-P100, P150  | MPK-PHB     | 1 | B | No | AD     |    |

|       |                     |        |   |   |    |    |  |
|-------|---------------------|--------|---|---|----|----|--|
| Nikon | E7900, E5900        | WP-CP4 | 1 | B | No | AD |  |
|       | E4200, E5200        | WP-CP2 | 1 | B | No | AD |  |
|       | E2200, E3200, E4100 | WP-CP1 | 1 | B | No | AD |  |

**[Interchangeable lens digital camera]**

| Mfr       | Camera            | Housing     | Pattern | Screw Hole | Spacer | MB/LAB | RMK |
|-----------|-------------------|-------------|---------|------------|--------|--------|-----|
| Olympus   | OM-D E-M1 Mark II | PT-EP14     | 1       | A          | No     | —      | *2  |
|           | OM-D E-M5 Mark II | PT-EP13     | 1       | A          | No     | —      | *2  |
|           | PEN E-PL7         | PT-EP12     | 3       | A          | No     | —      |     |
|           | OM-D E-M1         | PT-EP11     | 3       | A          | No     | —      | *2  |
|           | PEN E-PL5         | PT-EP10     | 3       | A          | No     | —      | *2  |
|           | OM-D E-M5         | PT-EP08     | 3       | A          | No     | —      | *2  |
|           | PEN E-PM1         | PT-EP06L    | 3       | A          | No     | —      | *2  |
|           | PEN E-PL3         | PT-EP05L    | 3       | A          | No     | —      | *2  |
|           | PEN E-PL2         | PT-EP03     | 3       | A          | No     | —      | *2  |
|           | PEN E-PL1         | PT-EP01     | 3       | A          | No     | —      | *2  |
| Panasonic | LUMIX GF2         | X-2 for GF2 | 1       | B          | No     | —      | *2  |
|           | LUMIX GF1         | X-2 for GF1 | 1       | B          | No     | —      | *2  |

| Mfr       | Camera           | Housing | Pattern | Screw Hole | Spacer | MB/LAB | RMK |
|-----------|------------------|---------|---------|------------|--------|--------|-----|
| Panasonic | LUMIX FT5        | MCFT5   | 2       | B          | No     | 28LD   |     |
|           | LUMIX FT3, FT4   | MCFT3   | 2       | B          | No     | 28LD   |     |
|           | LUMIX FT2        | MCFT2   | 2       | B          | No     | 28AD   |     |
|           | LUMIX FT1        | MCFT1   | 2       | B          | No     | 28AD   |     |
|           | LUMIX TZ40       | MCTZ40  | 2       | B          | No     | M67LAB |     |
|           | LUMIX TZ35       | MCTZ35  | 2       | B          | No     | M67LAB |     |
|           | LUMIX TZ30       | MCTZ30  | 2       | B          | No     | M67LAB |     |
|           | LUMIX TZ20       | MCTZ20  | 2       | B          | No     | M67LAB |     |
|           | LUMIX TZ10       | MCTZ10  | 2       | B          | No     | M67LAB |     |
|           | LUMIX TZ7        | MCTZ7   | 2       | B          | No     | M67LAB |     |
|           | LUMIX TZ5        | MCTZ5   | 2       | B          | No     | M67LAB |     |
|           | LUMIX TZ3        | MCTZ3   | 2       | B          | No     | —      |     |
|           | LUMIX ZX3        | MCZX3   | 2       | B          | No     | M67LAB |     |
|           | LUMIX ZX1        | MCZX1   | 2       | B          | No     | M67LAB |     |
|           | LUMIX FX40       | MCFX40  | 2       | B          | No     | 28AD   |     |
|           | LUMIX FX35, FX37 | MCFX35  | 2       | B          | No     | 28AD   |     |
|           | LUMIX FX30, FX37 | MCFX30  | 2       | B          | No     | 28AD   |     |
|           | LUMIX FX01, FX07 | MCFX07  | 2       | B          | No     | 28AD   |     |
|           | LUMIX FX01, FX07 | MCFX01  | 2       | B          | No     | 28AD   |     |
|           | LUMIX FS3, FS5   | MCF5    | 2       | B          | No     | 28AD   |     |
|           | LUMIX FS1, FS2   | MCFX07  | 2       | B          | No     | 28AD   |     |

|                      |                              |           |   |    |        |        |    |
|----------------------|------------------------------|-----------|---|----|--------|--------|----|
| Canon                | PowerShot G7 X Mark II       | WP-DC55   | 1 | B  | No     | LDLAB  |    |
|                      | PowerShot G7 X               | WP-DC54   | 1 | B  | No     | LDLAB  |    |
|                      | PowerShot G1 X Mark II       | WP-DC53   | 1 | A  | Yes    | —      |    |
|                      | PowerShot G16                | WP-DC52   | 1 | A  | No     | LDLAB  |    |
|                      | PowerShot S120               | WP-DC51   | 1 | B  | No     | 28LD   |    |
|                      | PowerShot SX280 HS           | WP-DC49   | 1 | B  | No     | LDLAB  |    |
|                      | PowerShot G15                | WP-DC48   | 1 | A  | No     | M67LAB |    |
|                      | PowerShot S110               | WP-DC47   | 1 | B  | No     | 28LD   |    |
|                      | PowerShot D20                | WP-DC45   | 2 | B  | No     | 28LD   |    |
|                      | PowerShot G1 X               | WP-DC44   | 1 | A  | No     | LDLAB  |    |
|                      | PowerShot SX260 HS           | WP-DC46   | 1 | B  | No     | LDLAB  |    |
|                      | PowerShot S100               | WP-DC43   | 1 | B  | No     | 28LD   |    |
|                      | PowerShot S95                | WP-DC38   | 1 | B  | No     | 28LD   |    |
|                      | PowerShot S90                | WP-DC35   | 1 | B  | No     | 28AD   |    |
|                      | PowerShot G11, G12           | WP-DC34   | 1 | A  | No     | —      |    |
|                      | PowerShot G10                | WP-DC28   | 1 | A  | No     | —      |    |
|                      | PowerShot G9                 | WP-DC21   | 1 | A  | No     | —      |    |
|                      | PowerShot A650IS             | WP-DC18   | 1 | A  | No     | —      |    |
|                      | PowerShot A570IS             | WP-DC12   | 1 | B  | No     | AD     |    |
|                      | PowerShot G7                 | WP-DC11   | 1 | A  | No     | —      |    |
|                      | PowerShot A540               | WP-DC2    | 1 | B  | No     | AD     |    |
|                      | PowerShot S80                | WP-DC1    | 1 | B  | No     | 28AD   |    |
|                      | PowerShot A95                | WP-DC50   | 1 | B  | No     | AD     | *1 |
|                      | PowerShot S60, S70           | WP-DC40   | 1 | B  | No     | 28AD   | *1 |
|                      | PowerShot A75, A85           | WP-DC30   | 1 | B  | No     | AD     | *1 |
|                      | PowerShot S1 IS              | WP-DC20   | 1 | B  | No     | M67    | *1 |
|                      | PowerShot A80                | WP-DC900  | 1 | B  | No     | AD     | *1 |
|                      | PowerShot A60, A70           | WP-DC700  | 1 | B  | No     | AD     | *1 |
|                      | PowerShot S30, S40, S45, S50 | WP-DC300  | 1 | A  | No     | AD/M67 |    |
|                      | PowerShot A10, A20, A30, A40 | WP-DC200s | 1 | A  | No     | AD/M67 |    |
|                      | PowerShot A10, A20           | WP-DC200  | 1 | A  | No     | AD/M67 |    |
|                      | IXY 200F                     | WP-DC36   | 1 | B  | No     | 28AD   |    |
|                      | IXY D220IS                   | WP-DC33   | 1 | B  | No     | 28AD   |    |
|                      | IXY D510IS                   | WP-DC32   | 5 | —  | Yes    | 28AD   |    |
|                      | IXY D210IS                   | WP-DC31   | 1 | B  | No     | AD     |    |
|                      | IXY D110IS                   | WP-DC29   | 1 | B  | No     | AD     |    |
|                      | IXY D3000IS                  | WP-DC27   | 1 | B  | No     | AD     | *1 |
|                      | IXY D920IS                   | WP-DC26   | 1 | B  | No     | 28AD   |    |
|                      | IXY D95IS                    | WP-DC24   | 1 | B  | No     | AD     |    |
|                      | IXY D25IS                    | WP-DC23   | 1 | B  | No     | AD     |    |
|                      | IXY D20IS                    | WP-DC22   | 1 | B  | No     | AD     |    |
|                      | IXY D2000IS                  | WP-DC19   | 1 | B  | No     | AD     | *1 |
|                      | IXY D910IS                   | WP-DC17   | 1 | B  | No     | 28AD   |    |
|                      | IXY D810IS                   | WP-DC15   | 1 | B  | No     | AD     | *1 |
|                      | IXY D90                      | WP-DC14   | 1 | B  | No     | AD     |    |
|                      | IXY D10                      | WP-DC13   | 1 | B  | No     | AD     |    |
|                      | IXY D900IS                   | WP-DC9    | 1 | B  | No     | 28AD   |    |
|                      | IXY D1000                    | WP-DC7    | 1 | B  | No     | AD     | *1 |
|                      | IXY D800IS                   | WP-DC5    | 1 | B  | No     | AD     | *1 |
|                      | IXY D70                      | WP-DC4    | 1 | B  | No     | AD     |    |
| IXY D80              | WP-DC3                       | 1         | B | No | AD     |        |    |
| IXY D700             | WP-DC80                      | 1         | B | No | AD     | *1     |    |
| IXY D600             | WP-DC70                      | 1         | B | No | AD     | *1     |    |
| IXY D400, D450, D500 | WP-DC800                     | 1         | B | No | AD     | *1     |    |
| IXY D300a            | WP-DC500                     | 1         | B | No | AD/M67 | *1     |    |
| IXY D300             | WP-DC100                     | 1         | B | No | AD/M67 | *1     |    |

\*1 Do not push Sub Plate too hard against to housing wall.

\*2 The [D Holder] of the [Grip Base D4] is for left side use only. When attaching on the right hand side of the housing, the D Holder part may be touched on the back of your right hand.

INON confirms product compatibility based on a camera/housing available in Japan.