

INON

INON 「Shoe Base 1/4-20UNC」 「Shoe Base M6」 「Shoe Base BALL」 Compatibility Chart

This chart shows 「Shoe Base 1/4-20UNC」, 「Shoe Base M6」 and 「Shoe Base BALL」 compatibility for different housing models. Refer to respective user manual for detail of installation method.

Glossary: [Compatibility] "○": compatible, "▲": conditionally compatible, "—": Not compatible
 [MB/LAB/VB] Mount Base (AD, 28LD, 28AD, M67), Lens Adapter Base (LD, M67), Video Base compatibility.

[Compact Digital camera]

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Olympus	TG-5	PT-058	○	—	
	TG-3, TG-4	PT-056	○	—	
	TG-830, TG-835	PT-055	○	—	
	XZ-2	PT-054	○	—	
	TG-1, TG-2	PT-053	○	—	
	TG-820	PT-052	○	—	
	TG-610, TG-810	PT-051	○	—	
	XZ-1	PT-050	○	—	
	μ TOUGH-6020, 8010	PT-048	○	—	
	μ TOUGH-6000	PT-047	○	28AD	
	FE-3010	PT-046	—	AD	
	μ TOUGH-8000	PT-045	○	28AD	
	FE-360	PT-044	—	AD	
	μ 1030SW	PT-043	○	28AD	
	μ 1020	PT-042	○	M67	
	μ 790SW, μ 850SW	PT-041	▲	AD	*1
	μ 780, μ 830	PT-039	○	M67	
	SP-550UZ, SP-560UZ	PT-037	▲	—	*3
	μ 760	PT-036	○	AD	
	μ 770SW, μ 795SW	PT-035	▲	AD	*1*2
	μ 750	PT-034	○	M67	
	μ 720SW, μ 725SW	PT-033	▲	AD	*1*2
	μ 710	PT-032	—	AD	
	SP-700	PT-031	—	AD	
	SP-350	PT-030	○	AD	
	μ 600	PT-029	○	AD	
	C-5060WZ, C-7070WZ	PT-027	—	28AD	
	μ-40	PT-026	—	AD	
	X-3	PT-024	—	AD	
	C-8080WZ	PT-023	—	—	
	C-760UZ, C-770UZ	PT-022	—	—	
	C-5060WZ	PT-020	—	28AD	
	C-740UZ, C-745UZ, C-750UZ, C-755UZ	PT-018	—	—	
	μ-10, μ-15, μ-20, μ-25, μ-30	PT-016	—	AD	
	C-5050Z	PT-015	—	—	
	X-1, X-2	PT-014	—	AD/M67	
C-40Z	PT-012	—	AD/M67		
C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z, C-3100Z, C-4040Z, C-4100Z	PT-010	—	—		
C-200Z, C-300Z	PT-009	—	AD		
C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z,	PT-007	—	—		
C-2020Z, C-3000Z, C-3030Z	PT-005	—	—		

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Panasonic	LUMIX FT5	MCFT5	▲	28LD	*1
	LUMIX FT3, FT4	MCFT3	○	28LD	
	LUMIX FT2	MCFT2	○	28AD	
	LUMIX FT1	MCFT1	○	28AD	
	LUMIX TZ40	MCTZ40	○	M67LAB	
	LUMIX TZ35	MCTZ35	○	M67LAB	
	LUMIX TZ30	MCTZ30	○	M67LAB	
	LUMIX TZ20	MCTZ20	○	M67LAB	
	LUMIX TZ10	MCTZ10	○	M67LAB	
	LUMIX TZ7	MCTZ7	○	M67LAB	
	LUMIX TZ5	MCTZ5	○	M67LAB	
	LUMIX TZ3	MCTZ3	—	—	
	LUMIX ZX3	MCZX3	○	M67LAB	
	LUMIX ZX1	MCZX1	○	M67LAB	
	LUMIX FX40	MCFX40	○	28AD	
	LUMIX FX35, FX37	MCFX35	○	28AD	
	LUMIX FX30, FX33	MCFX30	—	28AD	
	LUMIX FX01, FX07	MCFX07	—	28AD	
	LUMIX FX01, FX07	MCFX01	—	28AD	
	LUMIX FS3, FS5	MCF5	○	28AD	
LUMIX FS1, FS2	MCFX07	—	28AD		

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Fujifilm	FUJIFILM XQ1, XQ2	WP-XQ1	○	28LD	
	Finepix F300EXR, F550EXR, F600EXR	WP-FXF500	○	M67LAB	
	Finepix F80EXR	WP-FXF80	○	M67LAB	
	Finepix Z100fd, Z200fd, Z250fd	WP-FXZ100	—	—	
	Finepix F200EXR	WP-FXF200	○	M67LAB	
	Finepix F100fd	WP-FXF100	○	M67LAB	
	Finepix F50fd	WP-FXF50	—	AD	
	Finepix F40fd	WP-FXF40	—	AD	
	Finepix F30, F31fd	WP-FXF30	—	AD	
	Finepix F10, F11	WP-FXF10	—	AD	
	Finepix F710, F810	WP-FX701	—	AD	

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Sony	DSC-RX100M5, DSC-RX100M4, DSC-RX100M3, DSC-RX100M2, DSC-RX100	MPK-URX1 00A	○	—	
	DSC-WX50, WX100, WX200	MPK-WH	○	M67LAB	*4

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Canon	PowerShot G7 X Mark II	WP-DC55	○	LDLAB	*5
	PowerShot G7 X	WP-DC54	○	LDLAB	*5
	PowerShot G1 X Mark II	WP-DC53	○	—	*5
	PowerShot G16	WP-DC52	○	LDLAB	*5
	PowerShot S120	WP-DC51	○	28LD	*5
	PowerShot SX280 HS	WP-DC49	○	LDLAB	*5
	PowerShot G15	WP-DC48	○	M67LAB	*5
	PowerShot S110	WP-DC47	○	28LD	*5
	PowerShot D20	WP-DC45	○	28LD	*5
	PowerShot S100	WP-DC43	○	28LD	*4
	PowerShot S95	WP-DC38	○	28LD	*4
	PowerShot S90	WP-DC35	○	28AD	*4

[Interchangeable Lens Digital Camera]

Mfr	Camera	Housing	Compatibility	RMK
Canon	EOS 80D	X-2 for EOS80D	○	*6
	EOS 6D	X-2 for EOS6D	○	*6
	EOS 70D	X-2 for EOS70D	○	*6
	EOS 60D	X-2 for EOS60D	○	*6
	EOS 40D, 50D	X-2 for EOS50D/40D	○	*6
	EOS 30D	X-2 for EOS30D	○	*6
	EOS 20D	X-2 for EOS20D	○	*6
	EOS 10D	X-2 for EOS10D	○	*6
Panasonic	LUMIX GF2	X-2 for GF2	○	*6
	LUMIX GF1	X-2 for GF1	○	*6
Olympus	OM-D E-M1 Mark II	PT-EP14	○	
	OM-D E-M5 Mark II	PT-EP13	○	
	PEN E-PL7	PT-EP12	○	
	OM-D E-M1	PT-EP11	○	
	PEN E-PL5	PT-EP10	○	
	OM-D E-M5	PT-EP08	○	
	PEN E-PM1	PT-EP06L	○	
	PEN E-PL3	PT-EP05L	○	
	PEN E-PL2	PT-EP03	○	
	PEN E-PL1	PT-EP01	○	
	E-620	PT-E06	○	
	E-520	PT-E05	○	
	E-410	PT-E03	▲	*3
Nikon	Nikon 1 J4	WP-N3	○	
	Nikon 1 J3	WP-N2	○	
	Nikon 1 J2	WP-N1	○	

[Digital Camcorder]

Mfr	Camera	Housing	Compatibility	VB	RMK
Canon	iVIS HF M51, M52	WP-V4	○	VB	*4
	iVIS HF M41, M43	WP-V3	○	VB	*4
	iVIS HF M31	WP-V2	○	VB	*4
	iVIS HF20, 21	WP-V1	○	VB	*4

*1 Not usable together with 「Mont Base」 or 「Lens Adapter Base」.

*2 When attaching on the Accessory Shoe of the housing, locate the Hook Plate nail of the respective Shoe Base 【facing front】.

*3 An Optical D Cable Cap Set is not usable together with these Shoe Bases. Use Wireless Connection.

*4 These Shoe Bases can be attached only via optional compatible Mount Base/Video Base.

*5 「Accessory Shoe Spacer for Canon」 is necessary.

*6 「Shoe Base Adapter X-2」 is necessary.

INON confirms product compatibility based on a camera/housing available in Japan.

INON Inc.
 2-18-9, Dai, Kamakura,
 Kanagawa 247-0061 JAPAN
 E-mail support@inon.co.jp
 Fax. +81(0)467-48-2178
 URL http://www.inon.jp/

January 2018

INON

INON Shoe Base Compatibility Chart

This chart shows Shoe Base compatibility for different housing models. Refer to user manual of the Shoe Base for detail of installation method.

Glossary: [Compatibility] "O" indicates that the Shoe Base is compatible.
 [MB/LAB/VB] Mount Base (AD, 28LD, 28AD, M67), Lens Adapter Base (LD, M67), Video Base compatibility.

[Compact Digital camera]

Mfr	Camera	Housing	Compat ibility	MB/LAB	RMK
Olympus	TG-5	PT-058	○	—	
	TG-3, TG-4	PT-056	○	—	
	TG-830, TG-835	PT-055	○	—	
	XZ-2	PT-054	○	—	
	TG-1, TG-2	PT-053	○	—	
	TG-820	PT-052	○	—	
	TG-610, TG-810	PT-051	○	—	
	XZ-1	PT-050	○	—	
	μ TOUGH-6020, 8010	PT-048	○	—	
	μ TOUGH-6000	PT-047	○	28AD	
	FE-3010	PT-046	—	AD	
	μ TOUGH-8000	PT-045	○	28AD	
	FE-360	PT-044	—	AD	
	μ 1030SW	PT-043	○	28AD	
	μ 1020	PT-042	○	M67	
	μ 790SW, μ 850SW	PT-041	○	AD	*1
	μ 780, μ 830	PT-039	○	M67	
	SP-550UZ, SP-560UZ	PT-037	○	—	*2
	μ 760	PT-036	○	AD	
	μ 770SW, μ 795SW	PT-035	○	AD	*1
	μ 750	PT-034	○	M67	
	μ 720SW, μ 725SW	PT-033	○	AD	*1
	μ 710	PT-032	—	AD	
	SP-700	PT-031	—	AD	
	SP-350	PT-030	○	AD	
	μ 600	PT-029	○	AD	
	C-5060WZ, C-7070WZ	PT-027	—	28AD	
	μ -40	PT-026	—	AD	
	X-3	PT-024	—	AD	
	C-8080WZ	PT-023	—	—	
	C-760UZ, C-770UZ	PT-022	—	—	
	C-5060WZ	PT-020	—	28AD	
	C-740UZ, C-745UZ, C-750UZ, C-755UZ	PT-018	—	—	
μ -10, μ -15, μ -20, μ -25, μ -30	PT-016	—	AD		
C-5050Z	PT-015	—	—		
X-1, X-2	PT-014	—	AD/M67		
C-40Z	PT-012	—	AD/M67		
C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z, C-3100Z, C-4040Z, C-4100Z	PT-010	—	—		
C-200Z, C-300Z	PT-009	—	AD		
C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z	PT-007	—	—		
C-2020Z, C-3000Z, C-3030Z	PT-005	—	—		

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Panasonic	LUMIX FT5	MCFT5	○	28LD	
	LUMIX FT3, FT4	MCFT3	○	28LD	
	LUMIX FT2	MCFT2	○	28AD	
	LUMIX FT1	MCFT1	○	28AD	
	LUMIX TZ40	MCTZ40	○	M67LAB	
	LUMIX TZ35	MCTZ35	○	M67LAB	
	LUMIX TZ30	MCTZ30	○	M67LAB	
	LUMIX TZ20	MCTZ20	○	M67LAB	
	LUMIX TZ10	MCTZ10	○	M67LAB	
	LUMIX TZ7	MCTZ7	○	M67LAB	
	LUMIX TZ5	MCTZ5	○	M67LAB	
	LUMIX TZ3	MCTZ3	—	—	
	LUMIX ZX3	MCZX3	○	M67LAB	
	LUMIX ZX1	MCZX1	○	M67LAB	
	LUMIX FX40	MCFX40	○	28AD	
	LUMIX FX35, FX37	MCFX35	○	28AD	
	LUMIX FX30, FX33	MCFX30	—	28AD	
	LUMIX FX01, FX07	MCFX07	—	28AD	
	LUMIX FX01, FX07	MCFX01	—	28AD	
	LUMIX FS3, FS5	MCFX5	○	28AD	
LUMIX FS1, FS2	MCFX07	—	28AD		

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Fujifilm	FUJIFILM XQ1, XQ2	WP-XQ1	○	28LD	
	Finepix F300EXR, F550EXR, F600EXR	WP-FXF500	○	M67LAB	
	Finepix F80EXR	WP-FXF80	○	M67LAB	
	Finepix Z100fd, Z200fd, Z250fd	WP-FXZ100	—	—	
	Finepix F200EXR	WP-FXF200	○	M67LAB	
	Finepix F100fd	WP-FXF100	○	M67LAB	
	Finepix F50fd	WP-FXF50	—	AD	
	Finepix F40fd	WP-FXF40	—	AD	
	Finepix F30, F31fd	WP-FXF30	—	AD	
	Finepix F10, F11	WP-FXF10	—	AD	
	Finepix F710, F810	WP-FX701	—	AD	

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Sony	DSC-RX100M5, DSC-RX100M4, DSC-RX100M3, DSC-RX100M2, DSC-RX100	MPK-URX1 00A	○	—	
	DSC-WX50, WX100, WX200	MPK-WH	○	M67LAB	*3

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Canon	PowerShot G7 X Mark II	WP-DC55	○	LDLAB	*5
	PowerShot G7 X	WP-DC54	○	LDLAB	*5
	PowerShot G1 X Mark II	WP-DC53	○	—	*5
	PowerShot G16	WP-DC52	○	LDLAB	*5
	PowerShot S120	WP-DC51	○	28LD	*5
	PowerShot SX280 HS	WP-DC49	○	LDLAB	*5
	PowerShot G15	WP-DC48	○	M67LAB	*5
	PowerShot S110	WP-DC47	○	28LD	*5
	PowerShot D20	WP-DC45	○	28LD	*5
	PowerShot S100	WP-DC43	○	28LD	*3
	PowerShot S95	WP-DC38	○	28LD	*3
	PowerShot S90	WP-DC35	○	28AD	*3

[Interchangeable Lens Digital Camera]

Mfr	Camera	Housing	Compatibility	RMK
Canon	EOS 80D	X-2 for EOS80D	○	*4
	EOS 6D	X-2 for EOS6D	○	*4
	EOS 70D	X-2 for EOS70D	○	*4
	EOS 60D	X-2 for EOS60D	○	*4
	EOS 40D, 50D	X-2 for EOS50D/40D	○	*4
	EOS 30D	X-2 for EOS30D	○	*4
	EOS 20D	X-2 for EOS20D	○	*4
	EOS 10D	X-2 for EOS10D	○	*4
Panasonic	LUMIX GF2	X-2 for GF2	○	*4
	LUMIX GF1	X-2 for GF1	○	*4
Olympus	OM-D E-M1 Mark II	PT-EP14	○	
	OM-D E-M5 Mark II	PT-EP13	○	
	PEN E-PL7	PT-EP12	○	
	OM-D E-M1	PT-EP11	○	
	PEN E-PL5	PT-EP10	○	
	OM-D E-M5	PT-EP08	○	
	PEN E-PM1	PT-EP06L	○	
	PEN E-PL3	PT-EP05L	○	
	PEN E-PL2	PT-EP03	○	
	PEN E-PL1	PT-EP01	○	
	E-620	PT-E06	○	
	E-520	PT-E05	○	
	E-410	PT-E03	○	*2
Nikon	Nikon 1 J4	WP-N3	○	
	Nikon 1 J3	WP-N2	○	
	Nikon 1 J2	WP-N1	○	

[Digital Camcorder]

Mfr	Camera	Housing	Compatibility	VB	RMK
Canon	iVHS HF M51, M52	WP-V4	○	VB	*3
	iVHS HF M41, M43	WP-V3	○	VB	*3
	iVHS HF M31	WP-V2	○	VB	*3
	iVHS HF20, 21	WP-V1	○	VB	*3

- *1 Only following fiber optics products are compatible when using the Shoe Base to attach a strobe.
 ・「Optical D Cable SS Type L/Cap W42 Set with Clear Photo System Film」 「Optical D Cable Type L/Cap W42 Set with Clear Photo System Film」
 ・「Optical D Cable SS/Cap W42 Set with Clear Photo System Film」 「Optical D Cable/Cap W42 Set with Clear Photo System Film」
 Customers using following fiber optics product to connect a camera system and strobe via Shoe Base, need to modify them with optional 「Shade Panel・PT-033/035/041/043」
 ・「Optical D Cable/Cap W40 Set with Clear Photo System Film」
 ・「Optical D Cable/Cap W28 Set with Clear Photo System Film」
- *2 When attaching the Shoe Base to a housing directly, Optical D Cable/Cap Set is not usable. Use wireless connection.
- *3 The Shoe Base can be attached only via optional compatible Mount Base/Video Base.
- *4 「Shoe Base Adapter X-2」 is necessary.
- *5 「Accessory Shoe Spacer for Canon」 is necessary.

INON confirms product compatibility based on a camera/housing available in Japan.

INON Inc.
 2-18-9, Dai, Kamakura,
 Kanagawa 247-0061 JAPAN
 E-mail support@inon.co.jp
 Fax. +81(0)467-48-2178
 URL http://www.inon.co.jp/

January 2018