

Thank you for choosing INON product. Please read this manual thoroughly before use to ensure proper and safe use, and retain it for future reference.

Package, Name of Parts

Compatible Product

Action Camera Mount(GP)

- ➤ INON ZD Front Mask / SD Front Mask (※)
- > INON M67 Filter Adapter (%)
- ➤ INON SD Mount Base (※)

(%) via Male Adapter supplied with each product


YS Mount

- INON Quick Holder Set S-LF
- INON Quick Holder Set S-LE
- INON Quick Base M6W
- > INON Quick Base S
- INON Single Light Holder LF
- INON Single Light Holder LE
- > INON Rotatable YS Extension Bar
- ➤ INON Z Joint



Installation (Action Camera Mount)

Align with the *Male Adapter* attached to the compatible product, and secure them together using the supplied *M5 Thumbscrew*.

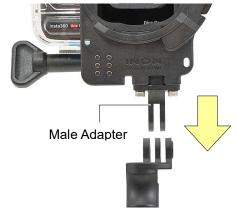



Installation (YS Mount)

Align with the YS Mount on the compatible product, and secure them using the supplied (with compatible product) M8 Thumbscrew.



Before Installation

- DO NOT screw the "M5 Thumbscrew" to the 4D Light Grip strongly without the Front Mask to prevent accidental damage.
- <u>DO NOT</u> contact action camera manufactures regarding installation of this product, as it is not under their responsibility. The user is solely responsible for the installation/use of this product.
- INON Inc. shall not be liable for any failure of the housing, housing accessory or camera due to installation/use of this product.
- INON Inc. shall not be liable in any way for any incidental damages (such as expenses incurred in taking pictures/footages or loss of profit that should have been gained by the pictures/footages) that may result from flooding or other problems caused by the installation/use of this product
- · Installation and use of this product shall be deemed as full consent of the user to the above conditions.

Maintenance

- After use, rinse with fresh water to remove salt and other stains, and place in a well-ventilated area out of direct sunlight to dry thoroughly.
- DO NOT expose directly to fire or heat as this may cause deformation or damage.
- <u>DO NOT</u> use organic solvents such as alcohol, benzene, thinner, or oils/chemicals such as rust inhibitors, lubricants, glazing agents, or detergents (especially alkaline detergents) when cleaning the product. Some of the components of this product may change when exposed to the above substances, such as melting or becoming brittle.
- Apply thin film of grease to the top edge of screw shaft of adapters, base to prevent anchoring due to salt build-up.
- If the product is not used for more than a week, please remove and store it. Storing the product being attached on the combined product for extended period may cause deformation/damage due to continuous force applied to the combined product.

Specifications

INON 4D Light Grip (4 Direction Light Grip) Specifications (*1)

Model	4D Light Grip
Mount standard	GP Standard + YS Standard
Size (excl. handle)	135 mm / 5.3 in (H) × 28 mm /1.1 in (W)* × 48 mm / 1.9 in (D) *Grip: 19mm / 0.7 in
Weight (incl. handle)	Air:approx. 60 g / 2.1 oz, underwater:approx. 20 g / 0.7 oz
Material/surface finishing	PC etc.

(*1) Subject to change without prior notice

(*2) All brand, product, and feature names in this manual are trademarks or registered trademarks of their respective owners. INON Inc.

2-18-9, Dai, Kamakura, Kanagawa 247-0061 JAPAN E-mail support@inon.co.jp Fax. +81(0)467-48-2178 URL http://www.inon.jp/

October 2025