

INON AD-LD Mount Converter for UCL-165AD

Thank you for purchasing INON products.

INON AD-LD Mount Converter for UCL-165AD is exclusively for 28LD Mount compatible "28LD Mount Base" to attach AD Mount series attachment lens 「UCL-165AD Close-up Lens」.


Please note that the AD-LD Mount Converter for UCL-165AD is NOT compatible with \[\(\text{UFL-165AD} \) / \[\text{UWL-105AD} \] . Only 「UCL-165AD」 can be attached.

Compatible product: (as of December 2010)

- [Attachment Lens]
 - INON UCL-165AD Close-up Lens
- [28LD Mount Base/Lens Holder]
 - INON [28LD Mount Base DC38]
 - INON [LD Lens Holder W], [LD Lens Holder S], [LD Lens Holder for Float Arm」
 - ★: Using this product will have significant vignetting on image corners with/without a lens on land and underwater at zoom range from wide end to middle. Zoom to telephoto side to eliminate vignetting.

How to attach

- Apply a little amount of grease (supplied with an underwater case) on the leading edges of the bayonet as shown in the image (total three points).
- Put this product on the [28LD Mount Base] so that [Guide A [camera] of this product is coupled to _[Guide A] of the \[28LD Mount Base (1).
- Rotate the this product clockwise (2) until the lens lock release lever of the \(\gamma 28LD \) Mount Base \(\gamma \) moves back to the original position where you should feel and hear clicking.

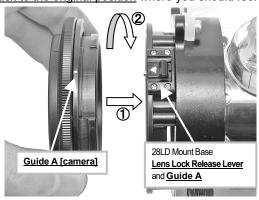





Guide A

[subject]

AD Mount side

Guide A

28LD Mount side

[camera]


Guide B

How to remove:

Pulling the Lens Lock Release Lever of the 28LD Mount Base to unlock, rotate this product in the reverse direction to separate from the 28LD Mount Base. Do not rotate this product without being unlocked to prevent damage on this product and/or \(\gamma 28LD \) Mount Base \(\gamma \).

How to attach a lens:

- Adjust [Guide A[camera]] of the UCL-165AD to [Guide A[subject]] of this product and push the UĆL-165AD into this product (3).
- Then rotate this product clockwise until **[Guide A[camera]] of the UCL-165AD** adjust to **[Guide B] of** this product (4). You should hear and feel clicking when the two Guides meet together.

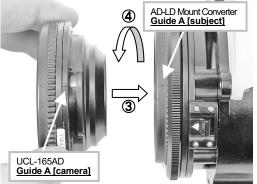



When you stack additional UCL-165AD on the UCL-165AD combined with 28LD Mount Base, deem [Guide A[subject]] of UCL-165AD (attached to 28LD Mount Base) as [Guide A[subject]] of this product.

E-mail support@inon.co.jp /

As of December 2010

INON Inc. 2-18-9, Dai, Kamakura, Kanagawa, 247-0061 Japan Fax. +81(0)467-48-2178 URL http://www.inon.jp/