# Quick Shoe W50 Clamp

Package contents:

W50 Clamp Body

M6x10 Cap Screw


· Allen Wrench 2mm

Allen Wrench 5mmThis user manual


① ×1 ② ×2

③ ×1 ④ ×1

×1

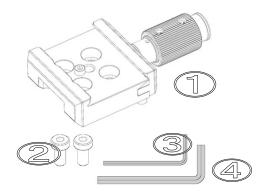

# Overview:

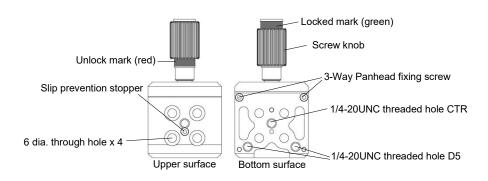

# Compatible products

[Quick Shoe]:

Quick Shoe W50 Plate, Quick Shoe W27 Plate, Quick Shoe W95 Plate

Quick Shoe L-Type Bracket

Note: Other brands' Arca-Swiss plate is **not** compatible with this product

Grip Base D5, UW 3-Way Panhead, UW Tripod Hub, Shoe Base 1/4-20UNC


[Arm System]: • D5 Holder, D Holder, Holder III

## Installation


[Arm Base]:

Quick Shoe Plate:

 Slowly turn the screw knob counterclockwise to unlock until red unlock mark is exposed. Turing the screw knob clockwise locks the clamp where green locked mark is exposed.



Securely attach combined **Quick Shoe Plate** on the **W50 Clamp Body** by engaging their dovetails one by one as per below illustration. Once dovetails have been securely engaged, keep turning the **screw knob** clockwise until the **locked mark (green)** is displayed.




 Make sure to completely tighten the screw knob to securely lock the clamp to prevent the Quick Shoe Plate from accidentally sliding out of the clamp resulting in damage of combined product or personal injury.


### Installation

Grip Base D5:

- Remove 3-Way Panhead fixing screws from the W50 Clamp Body by supplied Allen Wrench 2 mm.
- Screw the 1/4 Tripod Screw (L13.6) of the Grip Base D5 into the 1/4-20UNC threaded hole D5 on the bottom surface of the W50 Clamp Body.




Remove 3-Way Panhead fixing screw

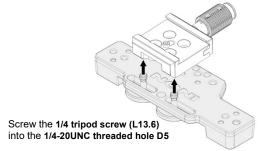


UW 3-Way Panhead:

- Screw the Tripod Screw (1/4 in) of the UW 3-Way Panhead into the 1/4-20UNC threaded hole CTR on the bottom surface of the W50 Clamp Body.
- Adjust the Camera Plate position so that its convex edge contacts 3-Way Panhead fixing screws of the W50 Clamp Body to avoid accidental loose of the tripod screw (1/4 in) and rattle of the Quick Shoe W50 Clamp then tighten the tripod screw (1/4 in) completely.

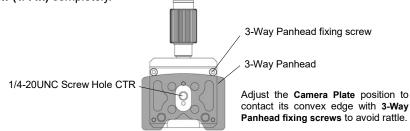

UW Tripod Hub: Shoe Base 1/4-20UNC  Screw the tripod screw (1/4 in) of the respective product into the 1/4-20UNC screw hole CTR on the bottom surface of the W50 Clamp Body to fasten two components.

D5 Holder: D Holder Holder III  Match M6 screw holes on th top edge of the respective handle to 6 dia. through holes and fasten with supplied two M6x10 Cap Screws by tightening them with supplied Allen Wrench 5 mm.

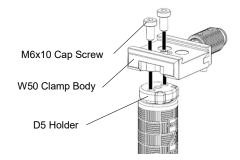

Maintenance:

- After using, soak in fresh water to dissolve remaining salt/remove dirt and dry it in shaded and well ventilated area. Never apply flame or direct heat to this product or damage may result.
- <u>DO NOT</u> clean with organic solvent like alcohol, benzene or thinner and oil and fat containing/chemical
  material like rust inhibitor, lubricant, polish, detergent (especially alkaline detergent) to avoid
  damage/deformation/degradation of this product.
- Periodically apply grease on metal part of screws to prevent them from rusting.

Storage:

- After completely dry, store out of direct sunlight in well-ventilated, dry area. Avoid storing near chemicals, high ozone, large temperature and humidity fluctuations to avoid deformation, damage, rust, mold or corrosion etc.
- Keep the product out of reach of children. They may swallow parts of this product. See a doctor immediately if a child swallow parts.

Handling:

- Make sure to follow installation procedures described in this manual. Insufficient tightening of the screw knob may lead to accidental separation/damage/loss of combined products and/or damage.
- <u>DO NOT</u> use this product for non-compatible products to avoid accidental separation/damage/loss of combined products. Use only with compatible products listed in this user manual.
- Securely hold this product/combined products during transportation of whole system without applying
  excessive shock, vibration and/or pressure. <u>DO NOT</u> hold compatible products only to transport whole
  system to avoid accidental separation/damage/loss of combined housing/products.

INON INC.

2-18-9, Dai, Kamakura, Kanagawa 247-0061 JAPAN E-mail <a href="mailto:support@inon.co.jp">support@inon.co.jp</a>, Fax +81(0)467-48-2178 URL <a href="mailto:http://www.inon.jp/">http://www.inon.jp/</a> As of September 2020