## Quick Shoe L-Type Bracket

L-Type Bracket Package contents:

L-Type Bracket Body

1/4-20UNC Cap Screw (L12.5)

M6 Washer

Allen Wrench 3/16 in

This user manual


×1

1 ×1 2 ×2

(3) ×2

**4**) ×1

×1

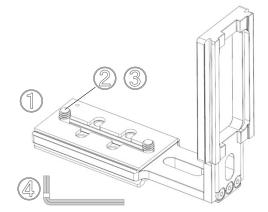

Compatible products: • Quick Shoe W50 Clamp Quick Shoe W27 Clamp

[Quick Shoe]

Quick Shoe Main Base

Compatible products:

INON X-2 series housing Other brands' housings \* \*\*

[Housing]

- Two 1/4 inch screw holes with center-to-center distance of 12 56 mm/0.5 2.2 inch are required and distance between center 1/4 inch screw hole and left end of the housing must be less than 100 mm/3.9 inch including a protruded part of the housing body, to install this product.
  - DO NOT use the L-Type Bracket if it prevents the combined housing from proper opening/closure to avoid accidental damage/flooding of the housing.
- INON INC. has not confirmed compatibility with specific housing from other manufacture. Before using, make sure to check if the housing from other manufacture is compatible with this product and does not interfere with other combined product(s).

Compatible products:


Multi Direct Base IIa, Multi Direct Base II Long

[Arm system]


Multi Direct Base II WB

Installation

Place the L-Type Bracket on to a combined housing at its tripod screw holes on the bottom so that slotted hole of the L-Type Bracket covers the tripod screw holes and partially/evenly tighten pre-installed 1/4-20UNC Cap Screws (L12.5) by supplied Allen Wrench 3/16 inch. Check/adjust the L-Type Bracket position and completely tighten the 1/4-20UNC Cap Screws (L12.5).

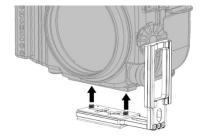

Slotted holes' ends have 1/4-20UNC thread as per the right illustration to use when removing pre-installed 1/4-20UNC Cap Screw (L12.5).



Installing **Arm System**  The L-Type Bracket is equipped with M6 threaded holes to attach variety of adapters.



Maximum two Multi Direct Base products can be installed.

INON INC.

2-18-9, Dai, Kamakura, Kanagawa 247-0061 JAPAN E-mail support@inon.co.jp, Fax +81(0)467-48-2178 URL <a href="http://www.inon.jp/">http://www.inon.jp/</a>